




1. Connect the two ends of the chain with the snap on link.

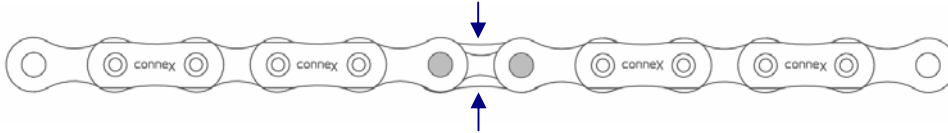


2. Slip the borehole of the outer plate over one pin.

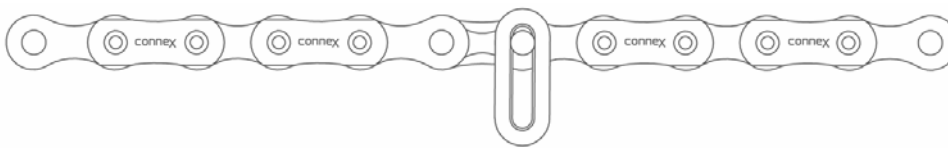

3. Push the plate up to the end of the slot and turn it 90°, so that the borehole is positioned over the second pin.

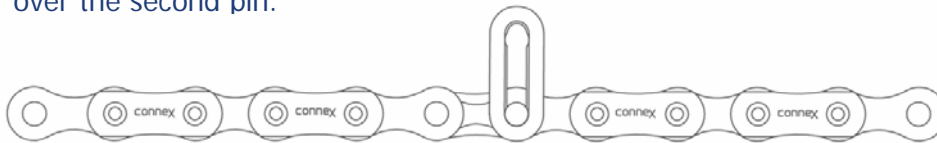

4. Bend the chain, so that the borehole can slide over the pin.

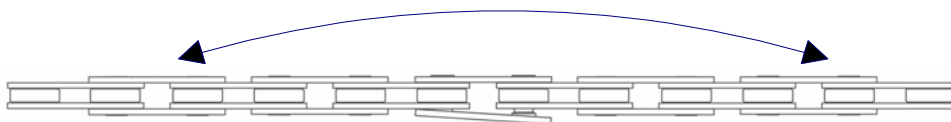

5. Release the chain and make sure that the connector plate clicks into place.



Caution!

Check to ensure that you've done this properly
(everything should have gone together
smoothly) before riding your bike.